


## BUILD UP SHEET REGUPOL ADHESIVES

**Forbo carpet tile floor finish over damp concrete subfloor  
using REGUPOL barrier 99-201, REGUPOL 4515 Eco underlayment and REGUPOL adhesive 46-101**

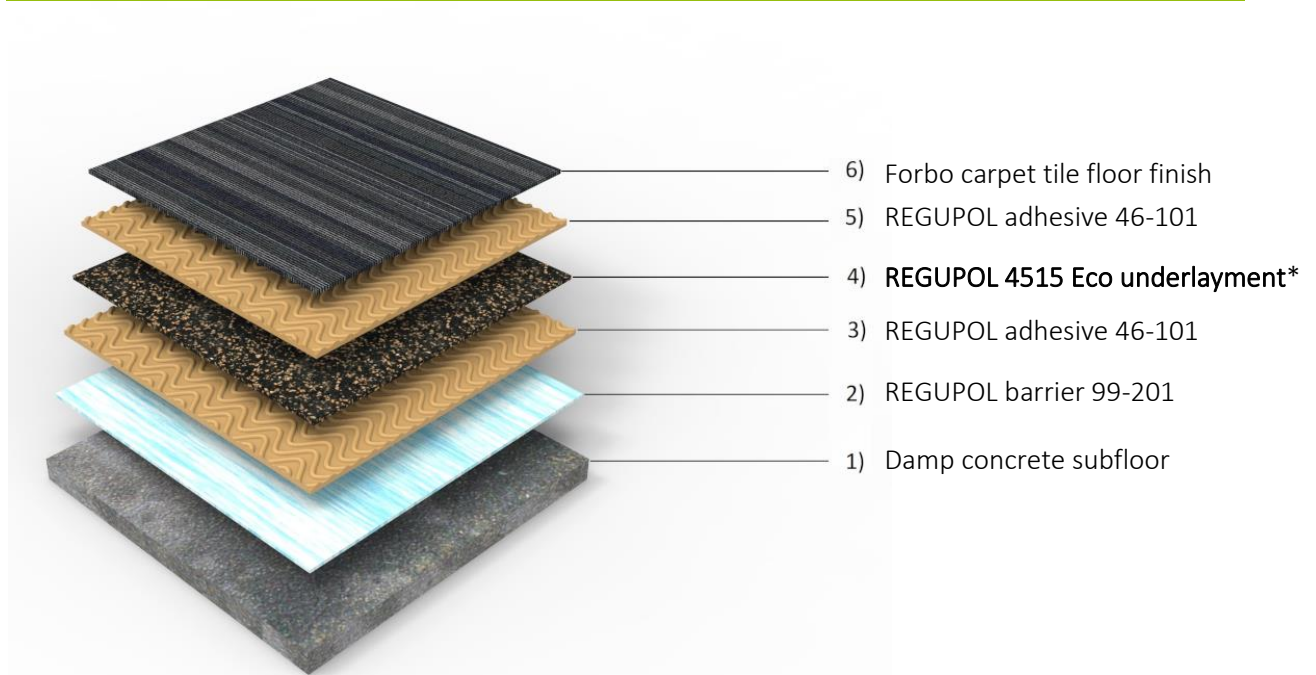

- 6) Forbo carpet tile floor finish
- 5) REGUPOL adhesive 46-101
- 4) **REGUPOL 4515 Eco underlayment\***
- 3) REGUPOL adhesive 46-101
- 2) REGUPOL barrier 99-201
- 1) Damp concrete subfloor

\*Or similar product from the REGUPOL acoustic insulation & underlay range as appropriate.

### Floor assembly

[1] DAMP CONCRETE	Damp concrete subfloor with a piped water underfloor heating system. Please refer to manufacturer for further information regarding this product and usage.
[2] REGUPOL BARRIER 99-201	A ready-for-use, one-part, water-based moisture vapour suppressant & DPM. Please refer to Technical Manual* for further information regarding this product and usage.
[3] REGUPOL ADHESIVE 46-101	Please refer to Technical Manual† for further information regarding this product and its application.
[4] REGUPOL 4515 ECO	REGUPOL 4515 Eco underlayment is sandwiched here between two layers of REGUPOL adhesive 46-101. Please refer to separate data sheet for further information regarding this product and its application.
[5] REGUPOL ADHESIVE 46-101	A second layer of REGUPOL adhesive 46-101 is applied here.
[6] FORBO CARPET TILE	Forbo carpet tile floor finish. Please refer to manufacturer for further information regarding this product and its usage.

†Technical Manual available upon request.