


BUILD UP SHEET REGUPOL ADHESIVES

**Forbo carpet tile floor finish over damp concrete subfloor
using REGUPOL barrier 99-201, REGUPOL 4515 Eco underlayment and REGUPOL adhesive 43-105**

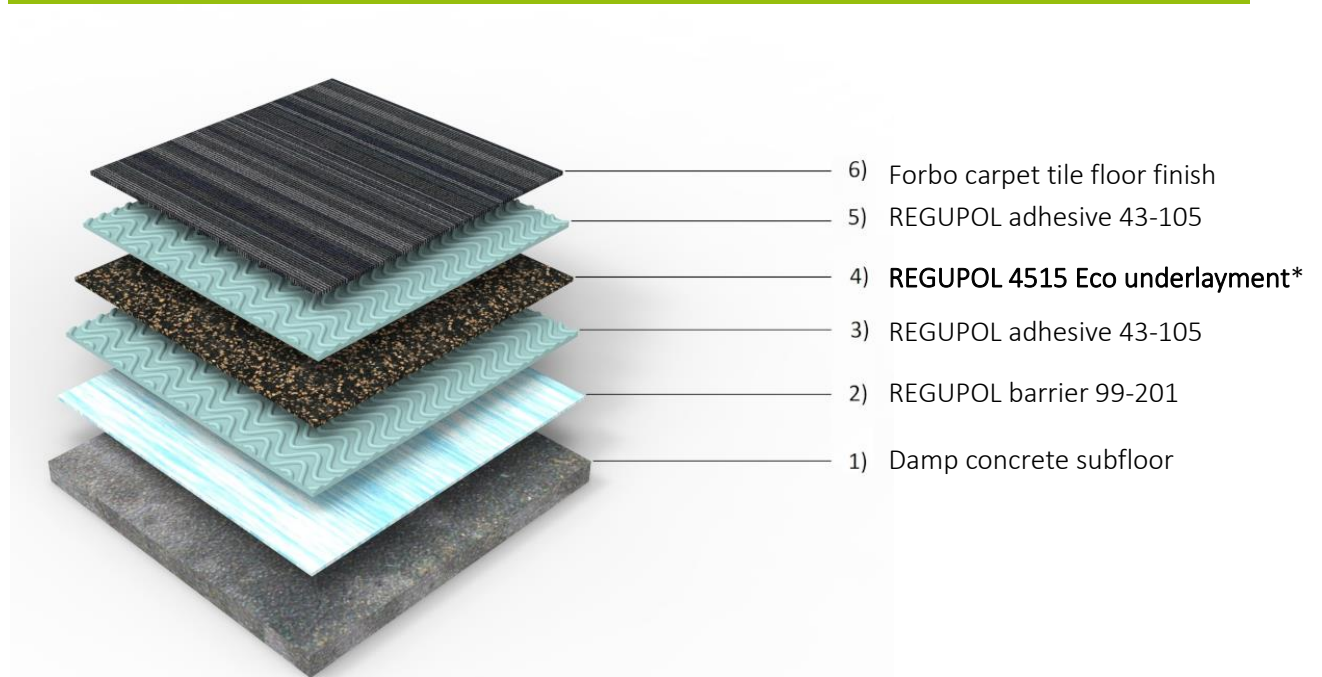

*Or similar product from the REGUPOL acoustic insulation & underlay range as appropriate.

Floor assembly

| | |
|-----------------------------|---|
| [1] DAMP CONCRETE | Damp concrete subfloor with a piped water underfloor heating system. Please refer to manufacturer for further information regarding this product and usage. |
| [2] REGUPOL BARRIER 99-201 | A ready-for-use, one-part, water-based moisture vapour suppressant & DPM. Please refer to Technical Manual† for further information regarding this product and usage. |
| [3] REGUPOL ADHESIVE 43-105 | Please refer to Technical Manual† for further information regarding this product and its application. |
| [4] REGUPOL 4515 ECO | REGUPOL 4515 Eco underlayment is sandwiched here between two layers of REGUPOL adhesive 43-105. Please refer to separate data sheet for further information regarding this product and its application. |
| [5] REGUPOL ADHESIVE 43-105 | A second layer of REGUPOL adhesive 43-105 is applied here. |
| [6] FORBO CARPET TILE | Forbo carpet tile floor finish. Please refer to manufacturer for further information regarding this product and its usage. |

†Technical Manual available upon request.