




## BUILD UP SHEET REGUPOL ADHESIVES

Parquet floor finish over P5 chipboard / plywood subfloor using REGUPOL 4515 Eco underlayment and REGUPOL adhesive 46-101.

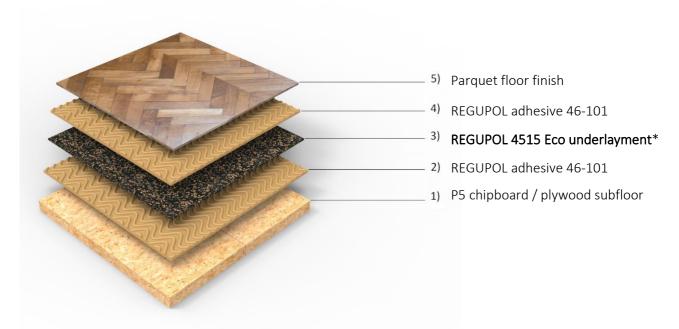

\*Or similar product from the REGUPOL acoustic insulation & underlay range as appropriate.

## Floor assembly

[1] P5 CHIPBOARD / PLYWOOD	P5 chipboard / plywood subfloor. Please refer to manufacturer for further information regarding this product and its usage.
[2] REGUPOL ADHESIVE 46-101	Please refer to separate Technical Manual <sup>+</sup> for further information regarding this product and its application.
[3] REGUPOL 4515 ECO	REGUPOL 4515 Eco underlayment is sandwiched here
	between two layers of REGUPOL Adhesive 46-101. Please
	refer to separate data sheet for further information regarding
	this product and its application.
[4] REGUPOL ADHESIVE 46-101	A second layer of REGUPOL adhesive 46-101 is applied here.
[6] PARQUET	Parquet floor finish. Please refer to manufacturer for further
	information regarding this product and its usage.
1 · · · · · · · · · · · · · · · · · · ·	

<sup>†</sup>Technical Manual available upon request.